



Starter Motor Heat Shield #3678

Installation Instructions

Heat Shield installation may be completed without removing the starter from vehicle if there is adequate clearance inside engine compartment.

1. Disconnect "Negative" battery cable before beginning installation.
2. Loosen both outside/inside solenoid bolt (do not remove).
3. Loosen upper front starter cover bolt and install heat shield.
4. Remove inside and outside solenoid bolts. Rotate heat shield into position and re-stall bolts.
5. Tighten all bolts mounting securely.
6. Reconnect "Negative" battery cable.

CAUTION: Be sure starter wires do not rub against Heat Shield, Engine Block or Cylinder Head.



MR. GASKET IS A TRADEMARK OF PRESTOLITE PERFORMANCE
10601 MEMPHIS AVE. #12, CLEVELAND, OH 44144
PHONE 216.688.8300 • FAX 216.688.8306

FORM 97140000
02/13
Printed in USA