


THE USER OF THIS PRODUCT SHALL DETERMINE THE SUITABILITY AND SAFETY OF THE PRODUCT FOR ITS INTENDED USE AND THE USER ASSUMES ALL RESPONSIBILITY AND RISK IN CONNECTION THERE WITH.

The user of this lift assumes all risks at time of purchase.

*****WAIVER OF WARRANTY, NO GAURANTEE*****

THIS PRODUCT AND EACH PART THERE OF IS SOLD AS IS AND WITH ALL FAULTS THERE IS NO WARRANTY.

TP FABRICATING LLC WILL NOT BE LIABLE FOR LOSS,
DAMAGE OR INJURY ARISING FROM THE USE OF THIS
PRODUCT.



Quick lift directions for use:

- 1. Hookup ground cable to battery.
- 2. Grease all pivot points periodically.
- 3. Inspect for hydraulic leaks daily.
- 4. Inspect overall condition of lift daily.
- 5. Always make sure lift is completely down before driving over top of lift.
- 6. If oil tank is overfilled, some oil may leak out of vent cap. If this occurs drain oil as needed, 2-3 quarts of oil is sufficient.

- 7. If hose does not connect to coupler, push the down button and release pressure and couple fittings.
- 8. Never unhook hydraulic hose with lift in the raised position and always turn coupler to lock it after connecting, the lift requires pressure at all times.
- 9. Safety locks are added for added safety and not intended to hold a load for an extended amount of time.
- 10. On the front side of the pump is a manual valve to release hydraulic pressure, push in and turn counterclockwise if the down solenoid fails.

11. LAST AND MOST IMPORTANT, USE THE SAFETY LOCK AND JACK STANDS WHEN USING THIS LIFT!

The user of this lift assumes all risks at the time of purchase.

Thanks for the purchase and enjoy the ease of your new Quick-Lift.