

# WHEEL SPACERS REFERENCE GUIDE & TORQUE TECH TIPS


## WARNINGS!

**CAST WHEEL SPACERS & ADAPTERS** are for passenger car use only. **WARRANTY IS VOID** if used on SUVs, pickups, vans, station wagons, competition, off-road vehicles, trailers or front wheel drive vehicles. Do not use on wheels over 16" or with low-profile tires (55 series and lower).

### ALL WHEEL SPACERS & ADAPTERS


- NEVER use an impact wrench
- NEVER use more than one adapter or spacer per wheel
- NEVER use if offset is more than 1".

## BOLT CIRCLE MEASURING GUIDE

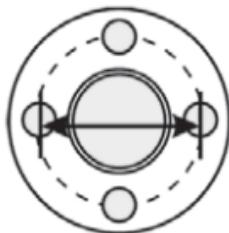


### 4-LUG

Middle of two holes directly across from one another.

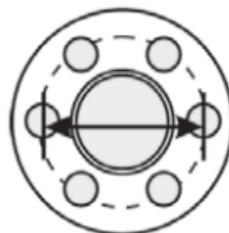


### 6-LUG

Middle of two holes directly across from one another.

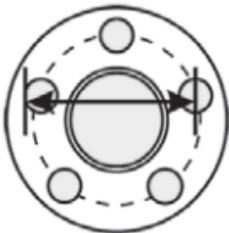

### 5-LUG

Back of hole to the center of the second bolt hole.

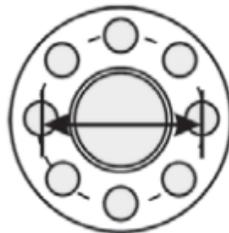

### 8-LUG


Middle of two holes directly across from one another.

## METRIC CONVERSION


Inches	Millimeters
4"	100mm
4 1/2"	114.3mm
4 3/4"	120.65mm
5"	127mm
5 1/2"	139mm

## TORQUE TECH TIPS


LUG SIZE	7/16"	1/2"	12MM	14MM
TORQUE (FT. LBS.)	70-75	80-85	75-80	85-90

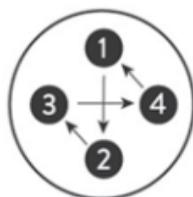


4 Lug Tightening Pattern

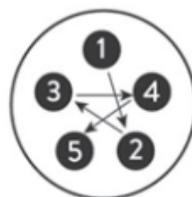

5 Lug Tightening Pattern

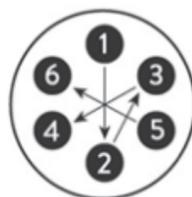

6 Lug Tightening Pattern

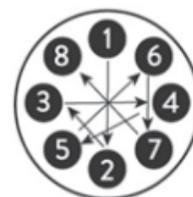

8 Lug Tightening Pattern