



Installation Instructions

Part Number 28-20392

This filter fits: SEE CATALOG FOR CURRENT APPLICATIONS

With proper care, this filter will last the life of your vehicle. This filter may be used in a stock machine, and no modifications will be required. However there are special installation instructions, so please follow the procedures outlined below to ensure that the AEM® air filter seals properly.

INSTALLATION

1. Unfasten the two air box clips.
2. Remove the stock air filter. (Fig. 1)
3. Install the AEM® Air Filter into the provided air filter cage. (Fig. 2)
4. Install the AEM® Air Filter assembly into the air box making sure it is completely seated. (Fig. 3)
5. Refasten the air box clips. (Fig. 4)

THESE INSTRUCTIONS MUST BE FOLLOWED EVERY TIME THE FILTER IS SERVICED, OTHERWISE THE FILTER MAY NOT SEAL, AND DAMAGE TO THE ENGINE COULD RESULT.

* Pictures in this instruction sheet are for reference only. Your vehicle may look different. *



Fig. 1



Fig. 2



Fig. 3

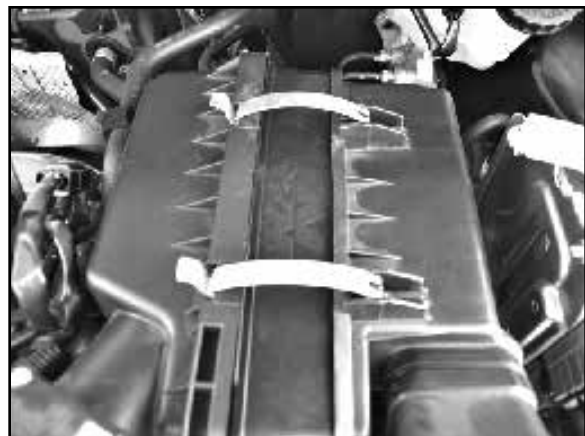


Fig. 4