


1958-UP SMALL BLOCK & BIG BLOCK CHEVY INTO 1949-54 CHEVY PASSANGER CARS

1. Attach motor mount 'wings' to engine.
2. Align frame brackets to frame, using engine as a guide. The mounting bosses on the block will dictate the proper location.
3. After fit check, drill frame and attach frame brackets. (May be welded for added strength).
4. Lower engine and insert biscuit mounts between frame brackets and 'wings'. Bolt mounts into place using supplied hardware.


Motor mount wing

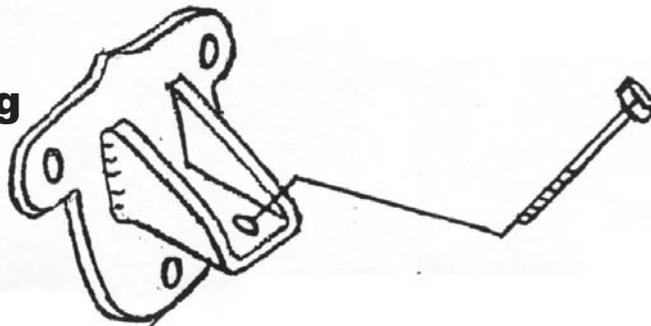

Biscuit mount



Frame Bracket

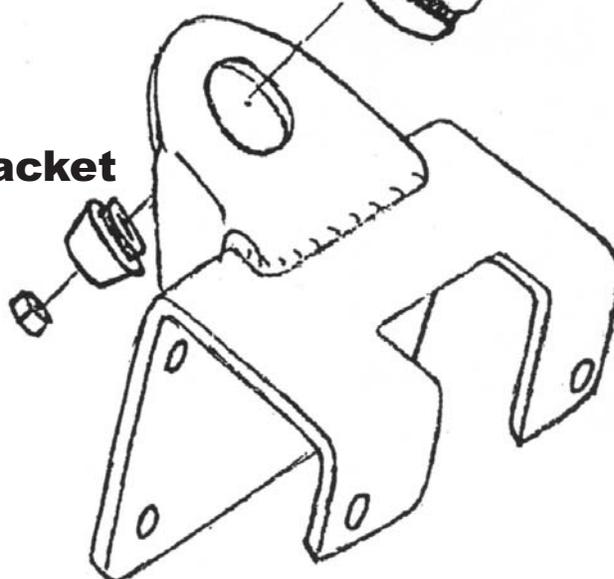

Note: These kits are intended as an aid in performing this swap. Other parts and modifications may be required. Thank you for choosing Trans-Dapt Performance Products.