








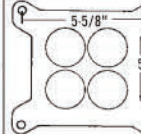




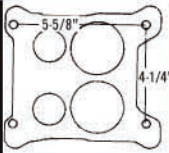
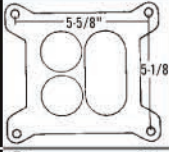
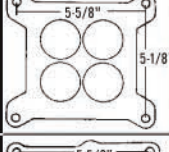
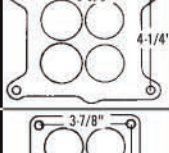
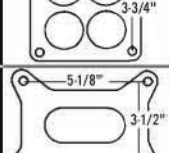
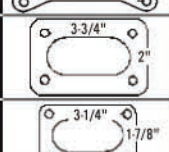
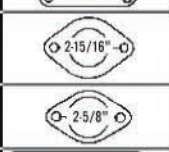
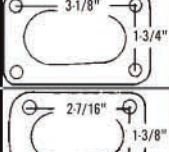
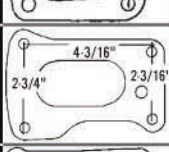







CARBURETOR BASE

TO FIND THE CORRECT ADAPTER MATCH THE CARBURETOR TO THE MANIFOLD.

| SMALL ONE BBL. | LARGE ONE BBL. | HOLLEY 5200/5210 WEBER DGEV/DGAV DFAV/DFEV | 3-BOLT TWO BBL. (STROMBERG) | SMALL TWO BBL. | LARGE TWO BBL. (ROCHESTER) | HOLLEY TWO BBL. 350-500-650 CFM | SMALL ROCHESTER | AFB FOUR BBL. & LARGE ROCHESTER | HOLLEY FOUR BBL. | HOLLEY THREE BBL. | QUADRAJET THERMOQUAD SPREAD BORE | GM 4.3L V6 & SBC TBI 1.75" UNIT | GM 7.4L BBC TBI 2" UNIT |
|---|---|---|--|---|---|---|---|---|---|---|---|---|---|
|  |  |  |  |  |  |  |  |  |  |  |  |  |  |

Intake MANIFOLD Base

| | | | | | | | | | | | | | | |
|---|---|--|--|-------------|----------------|----------------|--|------|--|--|--|---------------------------------|--|-------------------------------------|
| QUADRAJET THERMOQUAD AND SPREAD BORE |  | | | | | 2087 | 2087 | | Universal 2066/2266 3220-Billet | 2034 Universal 2066/2266 3224-Billet 3220-Billet | Universal 2066/2266 3220-Billet | 2009 / 2109 | Front Mount 2208 Center Mount 2211 Rear Mount 2206 | Front Mount 2209 Rear Mount 2207 |
| HOLLEY THREE BARREL |  | | | | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | | 2090 | Various. Refer To Trans-Dapt Catalog pages 55-61 | Various. Refer To Trans-Dapt Catalog pages 55-61 | 2066 / 2266 | Front Mount 2202 Rear Mount 2200 | Front Mount 2203 Rear Mount 2201 |
| HOLLEY FOUR BARREL |  | | | | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 3223-Billet | 2064 | 2048 Spacer 2081 Spacer Universal 2090 | Various. Refer To Trans-Dapt Catalog pages 55-61 | Various. Refer To Trans-Dapt Catalog pages 55-61 | Universal 2066/2266 3220-Billet | Front Mount 2202 Center Mount 2210 Rear Mount 2200 | Front Mount 2203 Rear Mount 2201 |
| AFB FOUR BBL. (INCLUDING LARGE ROCHESTER) |  | | | | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 3223-Billet | 2064 | Various. Refer To Trans-Dapt Catalog pages 55-61 | 2048 Spacer 2081 Spacer Universal 2090 | | Universal 2066/2266 3220-Billet | | |
| SMALL ROCHESTER |  | | | | UNIVERSAL 2065 | 2065 | 2065 | | 2062 3222-Billet | 2062 3222-Billet | | | | |
| HOLLEY TWO BARREL 350-500-650 CFM |  | | | | 2086 | | Various. Refer To Trans-Dapt Catalog pages 55-61 | 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | 2087 | 2204 | |
| LARGE TWO BARREL (ROCHESTER) |  | | | | | | | 2039 | 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | 2087 | |
| SMALL TWO BARREL |  | | | | | | | 2040 | 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | UNIVERSAL 2065 | 2087 | |
| LARGE ONE BARREL |  | | | 2025 / 2125 | 2025 / 2125 | 2025 / 2125 | | 2041 | | | | | | |
| SMALL ONE BARREL |  | | | 2025 / 2125 | 2025 / 2125 | | | 2044 | | | | | | |
| DATSUN 1600-1800 TOYOTA LUV COURIER |  | | | 2107 | | | | | | | | | | |
| DATSUN 8-110, 8-210 HONDA CIVIC |  | | | 2133 | | | | | | | | | | |
| TOYOTA 20R SERIES |  | | | 2120 | | | | | | | | | | |
| TOYOTA 22R SERIES |  | | | 2181 | | | | 2184 | | | | | | |