



## TRANSMISSION ADAPTER PART# 0060

Fits 1963-Up Chevy V8 Engine to  
1966-Up Olds, Buick, Pontiac and  
Cadillac-Super Turbine 300, Th350, Th400


### INSTALLATION INSTRUCTIONS

**Important!** Read all instructions before you begin installation.

#### PART LIST

1 - Steel Adapter Plate	4 - 3/8-24 x 1" Hex Head Bolts	3 - 3/8-16 x 1" Hex Head Bolts
6 - 3/8" Flat Washers	2 - 24 x 1" Flat Head Socket Screws	2 - 3/8-16 x 1 1/2" Hex Head Bolts
6 - 5/16" Flat Washers		

1. Bolt adapter plate to the rear of the Chevrolet V8 Engine using the 3/8 16 x 1" bolts and the 3/8 16 x 1" Head Socket Screws included in this kit.
2. Use two 3/8 or 5/16 flat washers (depending on the bolt size used) on each converter bolt between the converter and the flex plate. **Torque to factory specs.**
3. Use the 3/8 24 x 1" Hex Head Bolts and the 3/8 16 x 1 1/2" Hex Head Bolts to mount the transmission to the plate and the engine. **Torque to factory specs.**
4. Use the stock flex when possible or use Chevrolet #471598.

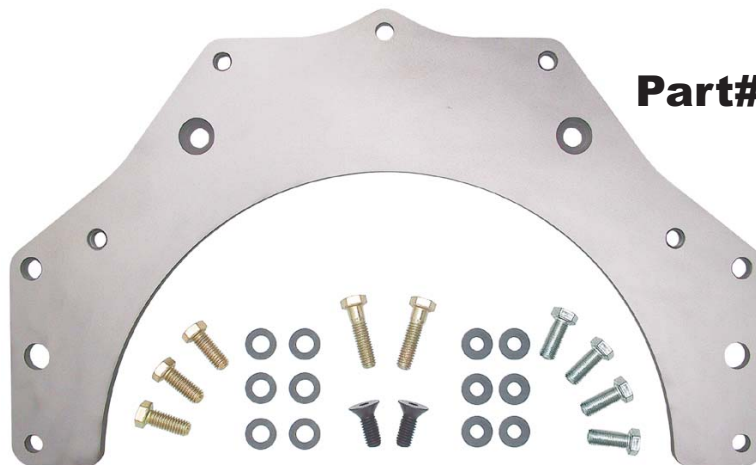

**Part# 0060**



Part #0055 PILOT BUSHING may be needed to align converter with crank on Chevy/GM when using 5/16" engine plate.

**Part# 0055**