



CUT OUT AND PLACE HOLE
OVER PLASTIC CLIP FOR
ALIGNMENT



CUT HERE

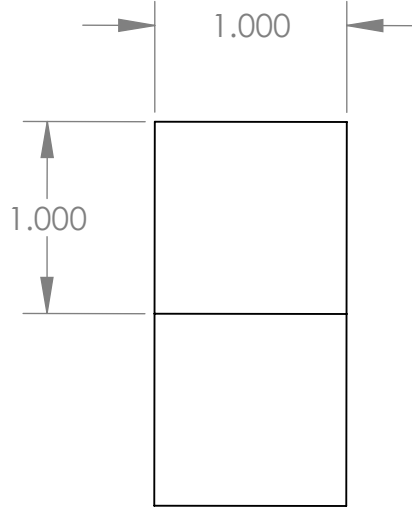

CUT HERE

CUT HERE

**CUT TEMPLATE FOR FORD F-150 INTAKE
KIT (AEM-21-8125)
TEMPLATE P/N: 10-394**

ALIGN THIS LINE WITH
EDGE OF FENDER LINER

CUT HERE